



Setting Remote Access

Greg Wolfe KIØKK

IP Address Visibility

- * Determine your home router IP address
 - Open a terminal and type **tracert**
 - On you may see IPv6 addresses
(2001:odb8:85a3:0000:0000:8a2e:0370:7334)

IP Network Type

- If your router IP is in the ranges shown here it will not be routeable on the internet.
- Solutions
 - CGNAT (by ISP)
 - VPN

Range (RFC 1918):

- 10.0.0.0 – 10.255.255.255
- 172.16.0.0 – 172.31.255.255
- 192.168.0.0 – 192.168.255.255

LAN Set Up

- Determine your rig MAC address from your local router.
- Assign a IP to your rig's MAC address vi DHCP reservations
- Port forward the IP ports used by your remote device/rig
- Test your set up by using an site such as “canyouseeme.org” to verify that the ports needed are open to your public IP address